



NestWorks

MPG Handwheel


User Guide

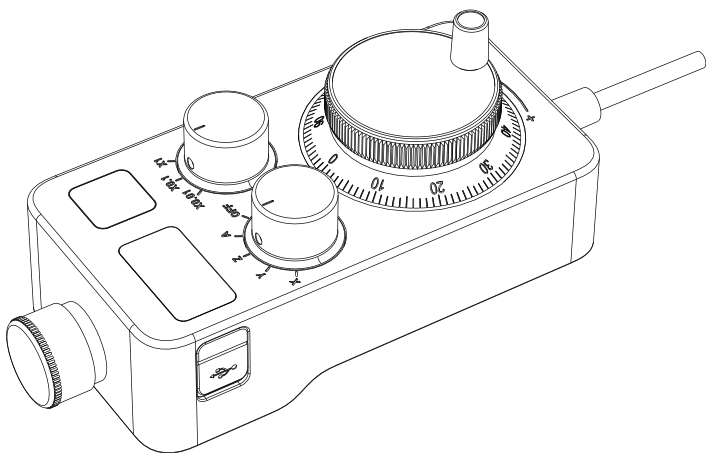


■ MPG Handwheel

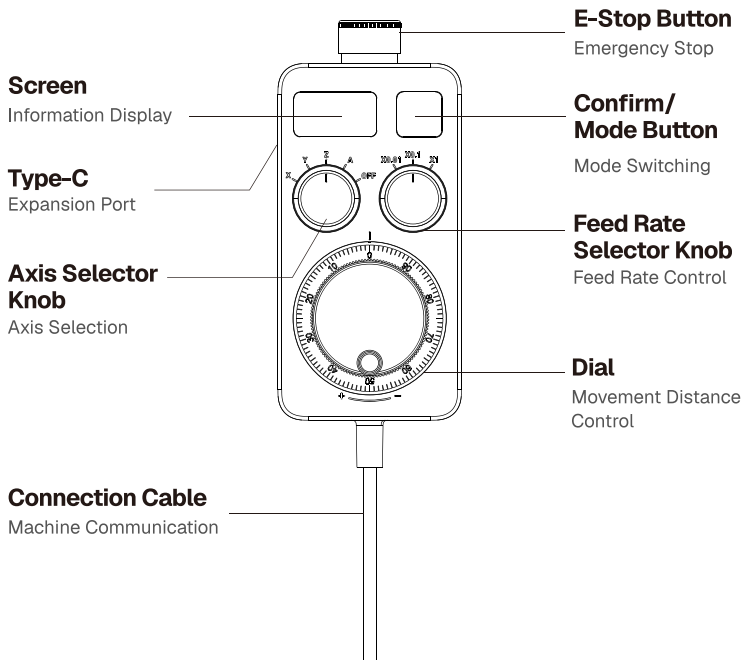


■ Installation

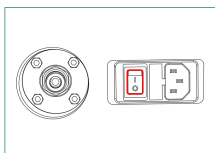

(1)

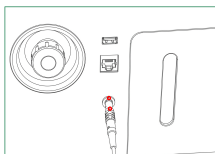


(2)

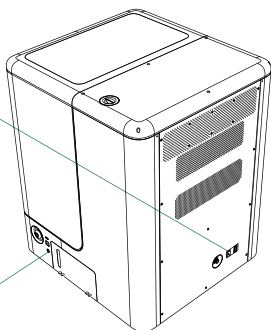

Power off the machine before installation or removal. Hot plugging may damage the machine's internal circuits.

- 1) Power off the machine.
- 2) Plug the handwheel cable into the port shown in the figure.


■ Installation

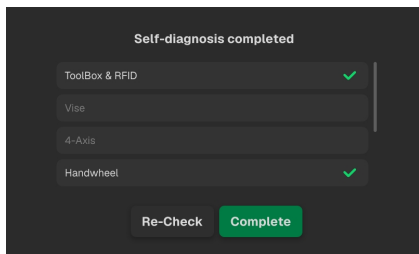

(3)

3) Power on the machine to start the self-check. Installation is complete when the handwheel is detected.



■ Installation

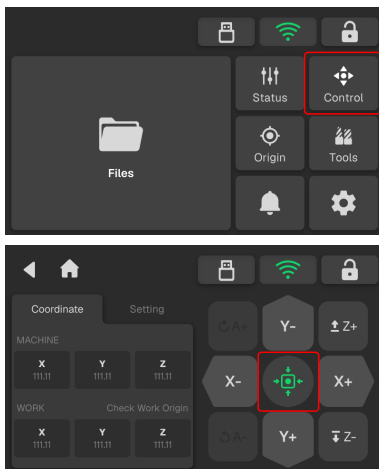


(4)

4) Close the protective cover and click **Reset**.

■ Screen Information

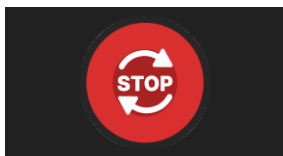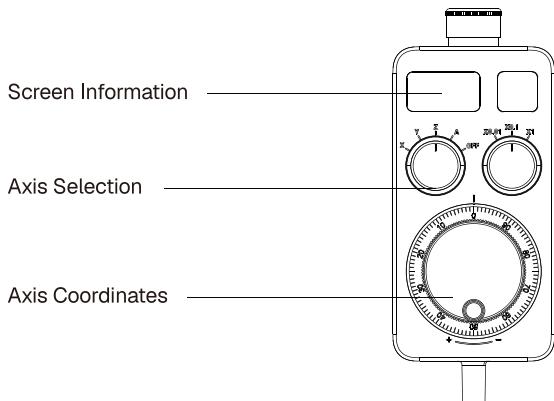


Abnormal Status

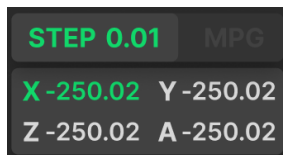

Axis Coordinates


■ Screen Information

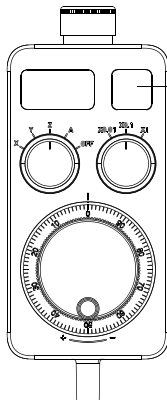


Short Press: Confirm

Press and Hold:
Switch Handwheel Mode
(Default Mode)

Press and Hold:
Unlock
(Locked Mode)

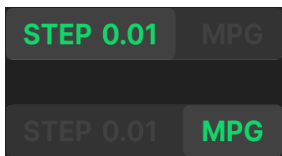

MPG: Pulse Mode
STEP: Step Mode

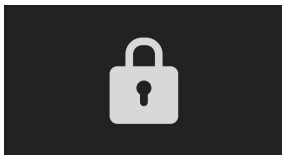

Locked Mode



<https://docs.worksbase.com/en/home>

Visit the official NestWorks Wiki for more detailed machine usage tutorials.

