 

 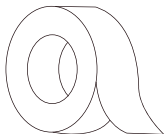




NestWorks

Standard Accessories Box

User Guide

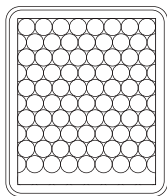

■ Standard Accessories Box

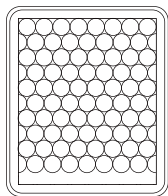

Filter Element

Air Filtration




Work Gloves

Hand Protection




Safety Goggles

Face Protection

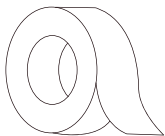


Double-Sided Tape

 Temporary Workpiece Fixing




Power Cord

■ Personal Protective Equipment

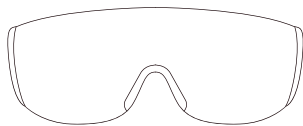


(A)

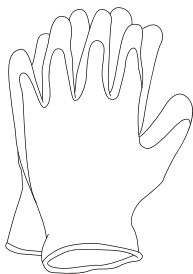


(B)

- A) The accessory kit includes gloves and goggles for personal protection.
- B) Wearing gloves while contacting the machine may cause your hands to be pulled into the machine.

■ General Accessories

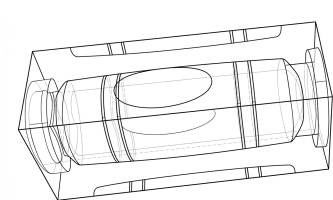

(A)

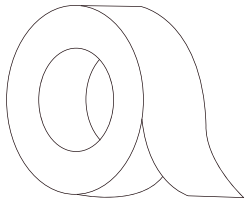


(B)

A) Spirit Level: After equipment installation or relocation, calibrate the worktable level to ensure machining accuracy.


B) Double-Sided Tape: For securing workpiece blanks. This is a temporary method; for normal machining, use fixtures, vises, or other tools in conjunction.

■ Waterproof and Dustproof

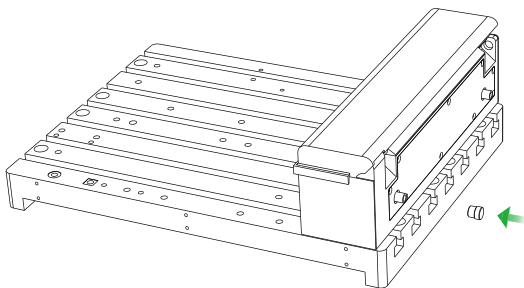

Aviation Connector Cap for Tool Magazin
Tool Magazine Plug Dust and Waterproof Protection

■ T-Shaped Rubber Plug



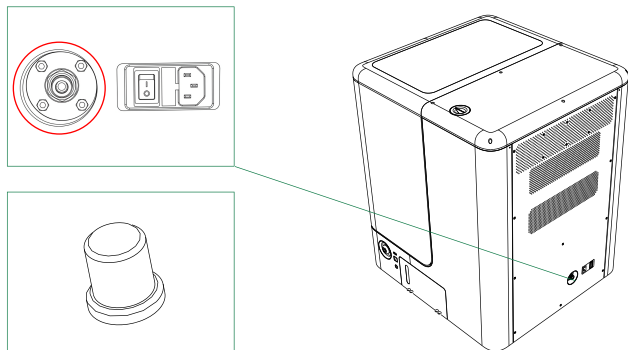


(A)

For dust protection of pneumatic ports. Available in two sizes:

A) T8.3 for the intake air source cap,


■ T-Shaped Rubber Plug

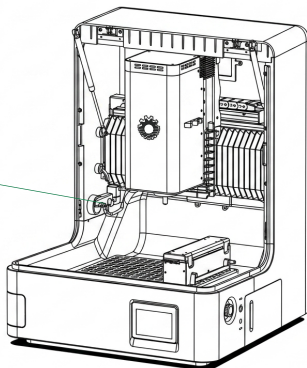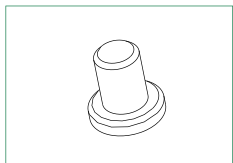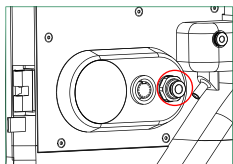


(B)

B) T6.3 for the internal exhaust air source cap.


■ Filter Replacement

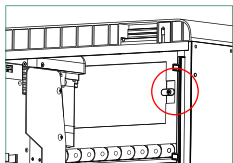

(1)

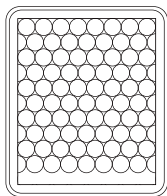

(2)

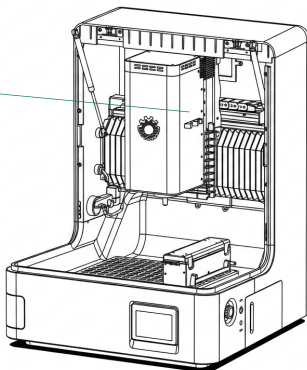

- 1) Move the spindle until the filter cover screws are exposed.
- 2) Remove the cover to replace the filter element.



<https://docs.worksbase.com/en/home>

Visit the official NestWorks Wiki for more detailed
machine usage tutorials.

